
## Quick coupling oo X

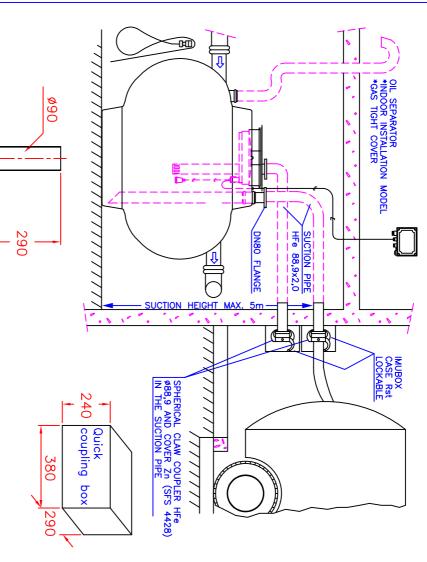

The movable mounting collar is installed to the desired pop rivets at the installation site. location on the outside of the box and fastened with

380

290

NOTE! If you make any changes on the drawing, mark (X) in the square. Changes made on the drawing:

indoors can be emptied from the outside. 1. With IMUBOX quick coupling box oil separators and grease separators installed

IMUBOX is made from stainless steel and it includes a spherical HFe ø88,9 claw coupler and Zn cover SFS 4428. On the inner surface of the hinged cover are the instructions for emptying the separator.

## INSTALLATION MODEL SEPARATOR 2. EMPTYING, OPERATION AND MAINTENANCE INSTRUCTIONS FOR THE INDOOR

space and the other pipe drains the whole storage volume from the bottom of equipped with a solid suction pipe, which drains the whole storage volume from can be installed indoors. When a grease separator is installed indoors, it is renevation sites or premises where is no free land area available, the separator In case the separator can't be installed in the ground outside the building, i.e. which one pipe drains the oil layer (hazardous waste) from the oil storage the bottom of the tank. Oil separators are equipped with two suction pipes of the tank.

accessible for the emptying truck. IMUBOX quick coupling box should be installed in a place where it is easily

must be done at least once a year. solidified grease requires special actions. Cleaning operation through a manhole be used to clean the dirt from separator walls and bottom. Removing dried and maintained through a manhole. For successful maintenance it is recommended to place the separator close to a hot water hose connection point, which can The separator should be installed in an air—conditioned room where it can be

requires a gas tight cover. The installation room of the separator must be sewered. Indoor installation

Notes:

Wavin no. AL/JS/EIK Design by: Checked by: IMUBOX Quick coupling box WAVIN-LABKO Approved by: 7.8.2014 98AB01\_e Construction site: Drawing no. page: 6.8.2014 CUSTOMER DRAWING Drawing type Scale:

This drawing and the technical information included in the drawing are property of Wavin-Labko. All the national regulations concerning this product have to be checked before purchase of the product. Installation have to be done according to installation manual.





Visiokatu 1 FIN-33720 Tampere FINLAND

Tel. +358-20-1285 200 Fax +358-20-1285 280 www.wavin-labko.fi